

 
lubluolu

Instruction Manual

Handy Cordless Vacuum
Cleaner Manual

Make Your Daily Cleaning Easy

Model Number: KB-H009

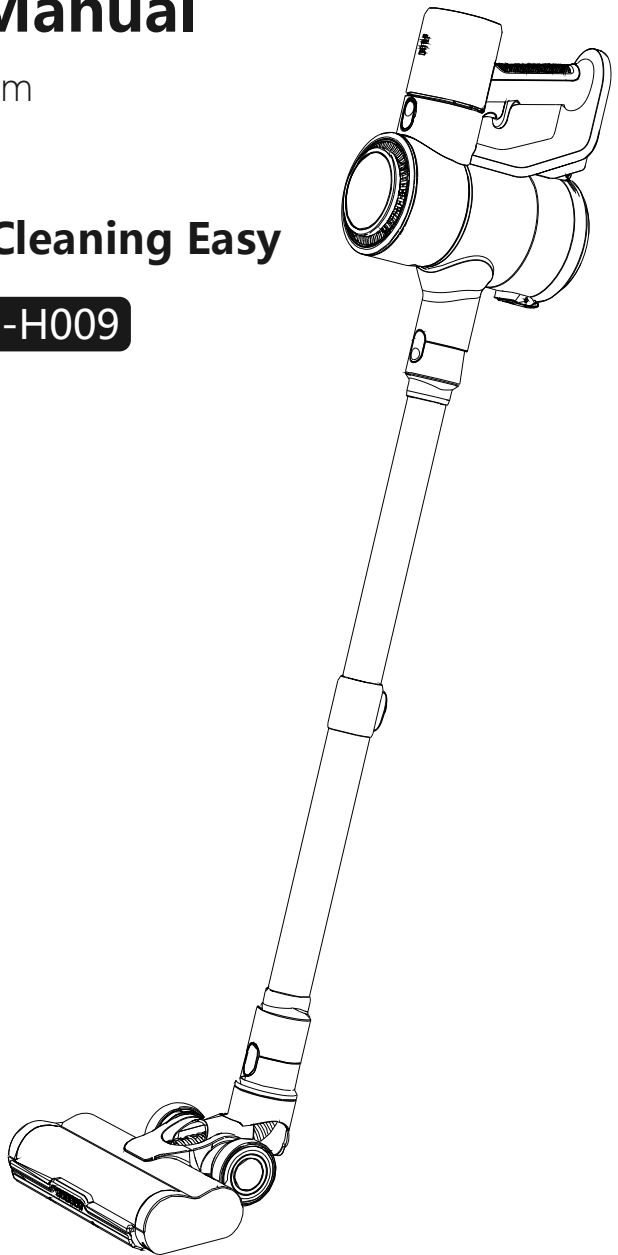

Contents

Important Safety Instructions-----	(01)
Product Instructions-----	(05)
Accessory Instructions-----	(06)
Assembly-----	(07)
Product Operation-----	(09)
Maintenance-----	(13)

Important Safety Instructions

IMPORTANT: READ ALL INSTRUCTIONS BEFORE USE.
RETAIN INSTRUCTIONS FOR FUTURE REFERENCE.

Do not use in rain or leave outdoors while raining.

WARNING: Basic safety precautions should always be observed when using an electrical appliance, including the following to reduce the risk of fire, electrical shock, or injury.

Personal Safety:

1. Store indoors in a dry place out reach of children;
2. Always use responsibly. This appliance can be used by children aged from 15 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved;
3. Don't let children play with the appliance; supervise children using or maintaining the appliance;
4. Use only manufacturer's recommended attachments as described in this manual; misuse or use of any accessory or attachment other than those recommended, may present a risk of personal injury;
5. Take extra care when cleaning stairs;
6. Keep the appliance and accessories away from hot surface;
7. Do not block the appliances openings or hinder air flow, keep openings free of any objects including dust, lint, clothing, fingers (and all parts of the body);
8. Particularly keep hair away from openings and moving parts;

Electrical Safety:

1. Only use batteries and chargers supplied by the manufacturer;
2. Never modify the charger in any way;
3. The charger has been designed for a specific voltage. Always check that the mains voltage is the same as that stated on the rating plate;
4. A charger that is suitable for one type of battery may create a risk of fire when used with another battery;
5. Before use, check the charger cord for signs of damage or ageing. A damaged or entangled charger cord increases the risk of fire and electric shock;
6. Do not abuse the charger cord;
7. Never carry the charger by the cord;
8. Do not pull the cord to disconnect from a socket, grasp the plug and pull to disconnect;
9. Don't wrap the cord around the charger when storing;
10. Keep the charger cord away from hot surfaces and sharp edges;
11. The supply cord can not be replaced. If the cord is damaged, the charger should be discarded and replaced;
12. Do not handle the charger or the appliance with wet hands;
13. Do not store or charge the appliance outdoors;
14. The charger must be removed from the socket before removing the battery, cleaning or maintaining the appliance.

Battery safety:

1. This appliance includes Li-ion batteries, do not incinerate batteries or expose to high temperatures as they may explode;
2. Liquid ejected from the battery may cause irritation or burns;

3. In an emergency situation contact professional help immediately;
4. Leaks from the battery can occur under extreme conditions.
Do not touch any liquid that leaks from the battery. If the liquid that gets on skin, wash immediately with soap and water. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes and seek medical attention. Wear gloves to handle the battery and dispose of them immediately in accordance with local regulations;
5. A short-circuit may cause a fire.
6. When the battery is not in use, keep it away from paper clips, coins, keys, nails, screws or other small metal objects that could make a connection from one terminal to another;
7. When you dispose of the appliance, remove the battery and dispose of the battery safely in accordance with local regulations.

Attention:

1. Before using the appliance and after any impact, check for signs of wear or damage and repair if necessary;
2. Do not use the appliance if any part is damaged or defective;
3. Repairs should be carried out by a service agent or a suitably qualified person in accordance with relevant safety regulations; Repairs by unqualified persons could be dangerous;
4. Never modify the appliance in any way as this may increase the risk of personal injury;
5. Only use replacement parts or accessories provided or recommended by manufacturer.

Intended use:

 
 
1. This appliance has been designed for domestic dry vacuum cleaning only;
2. Do not pick up liquids or use on wet surfaces;
3. Do not pick up anything that is flammable, burning or smoking;
4. Use only as described in this manual;
5. Don't use on concrete, tarmacadam or other rough surfaces.

WARNING:


1. Do not use water, solvents, or polishes to clean the outside of the appliance; wipe clean with a dry cloth;
2. Never immerse the unit in water and do not clean in a dish washer.

PRODUCT INSTRUCTIONS


Product Parts introduction:

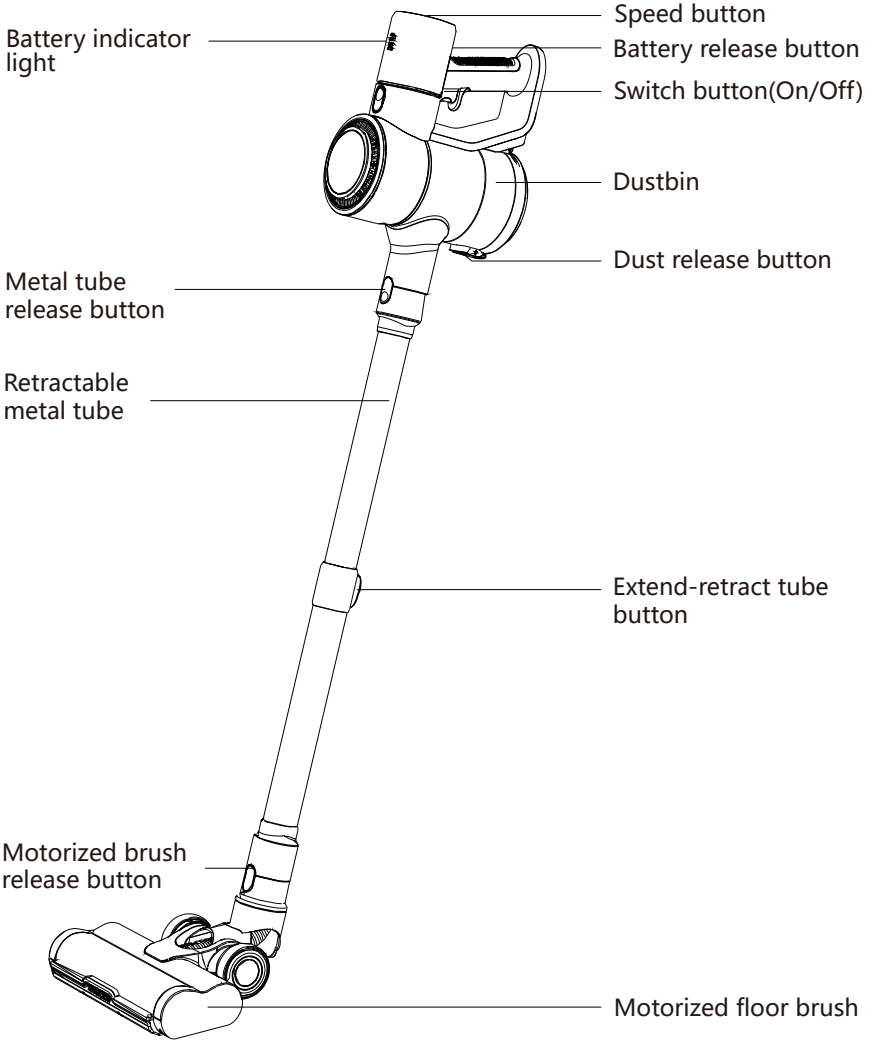


Long suction nozzle

 


Soft dusting brush

 

Wall mount

 

Power adapter

 

Hair cleaning tool



Filter Sponge

Accessory Instructions

Direct-drive LED multi-tasker power brush

Direct-drive technology increases the cleaning efficiency and creates a highly dynamic operation, very effective for agitating dirt embedded in the carpet, easy to clean fine dust and debris. Ideal for both hard floors and carpets.

Long suction nozzle

For corners, niches and other hard-to-reach places, such as car seat and mat, picture frame, etc.

Soft dusting brush

Angled bristles on slender, oval shape provide anti-static cushioned contact. Suitable for dusting sofa, curtain or other fabric furniture, or delicate surfaces, electronics, and more.

Hair cleaning tool

Use the end with small blade to remove the hair and debris wrapped around the roller. Use the end with little brush to clean the brush window, also can be used to clean the Dustbin and HEPA.

Wall Mount

Store the vacuum cleaner and brush on the wall by wall mount as needed.

Power Adapter

 
Charge the battery of vacuum cleaner by Power adapter.

Filter Sponge


Top Filter Sponge to increase the cleaning efficiency and remove up to 99.8% of microscopic dust particles as small as 0.3 microns.

Assembly

Install the Retractable metal tube

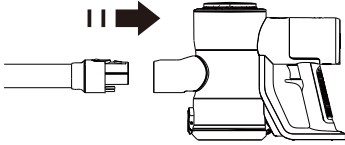


Insert the Retractable metal tube.

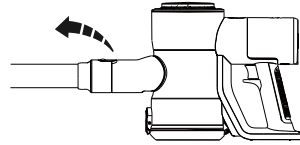 


Press the Release button and remove tube.

 Install the Motorized floor brush




Insert the Motorized floor brush.

 


Press the Release button and remove Motorized floor brush.

 Install the Roller Brush

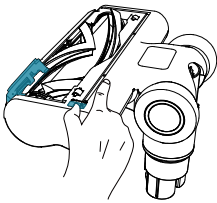


 Rotate counterclockwise Release Slot with coin or key.

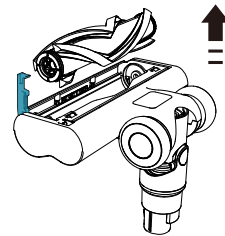


Take out the Slot, then take out the Roller Brush.

 Install Filter Components

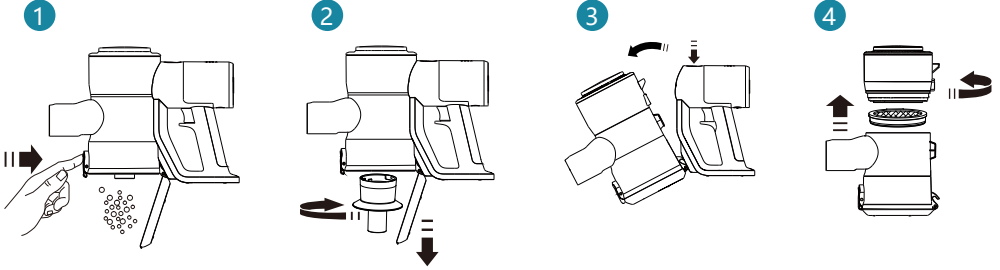


1. Empty the Dustin by pressing Release button.
2. Rotate the filter to the left to remove it.
3. Separate dustbin assembly from the maschine by pressing the release button.
4. Rotate it to the left to take the cover of dustbin and remove the sponge and hepa.

 Install the Battery

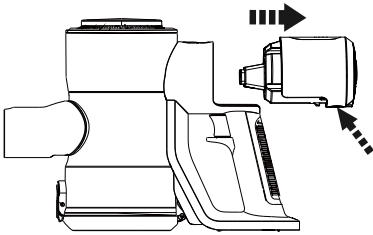

 Press the Battery release button and pull the battery out.

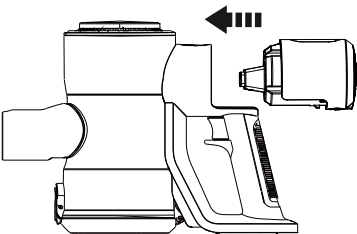


Slide the Battery into the main body. The battery will click into position when correctly fitted.


PRODUCT INSTRUCTIONS

Start to Work

 1

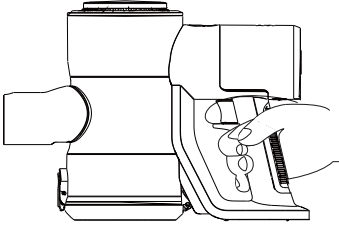

 
Press the Switch button, the vacuum machine will start to work;

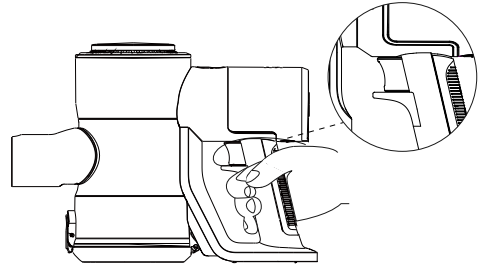


press the Switch button again and the vacuum machine will stop to work;

2

 
Status indication

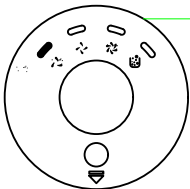


MIN

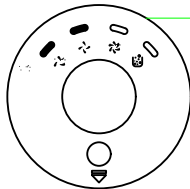 


MID

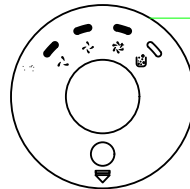 

MAX

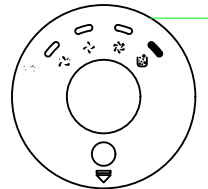 

Dust Clogging
Indicator Light

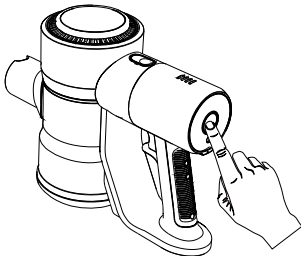 


Choose the MIN/MID/MAX Mode of Vacuum cleaner by Speed button for different floor condition.

Note: 1. Boot default medium suction.


2. Large suction noise is the largest, the highest cleaning efficiency, middle suction noise is general, high cleaning efficiency, low suction noise is the least, good cleaning efficiency.

 3



Press the extend-retract tube button with one hand, extending or retracting to choose the suitable vacuum cleaner height for more comfortable cleaning with the other hand;

 4

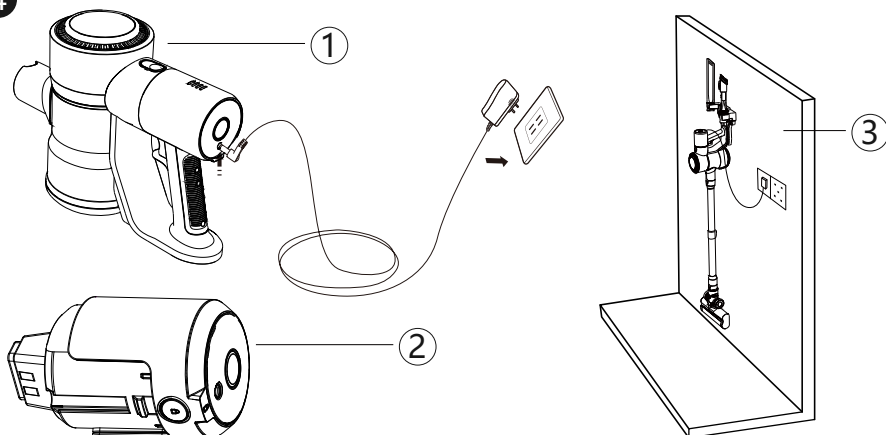

Battery charging:

Three Ways to charge the Vacuum cleaner:

- 1.Charge the vacuum cleaner head by Power adapter;
- 2.Remove the Battery from the vacuum cleaner and charge it separately by Power adapter;
- 3.Charge the whole vacuum cleaner by Power adapter.

Charging mode : directly insert into the charging socket of the battery to charge.

Battery indicator light:

1. When the Battery indicator flashes for seconds and turns off, indicating that the power has been used up. Please plug the charger adaptor into household socket for charging;

 
2. When the Battery indicator is always on and no longer flashing, it means that the machine is fully charged.

How to empty the Dustbin

Press the Dustbin release button

Note:

1. Please clean the Dustbin when the dust reaches its MAX level;
2. We suggest to clean the Dustbin every 3-5 days even the dust doesn't reach its MAX level.

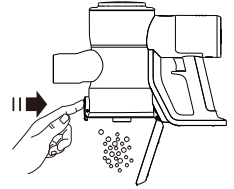



Clean the Filter components

Disassemble the filter system as above, then clean it.

1. Clean the Dustbin: Wipe it with brush or dry cloth.
2. Cleaning the Stainless steel mesh cover: Wipe it with brush or dry cloth. If it was too dirty, please wash and wipe dry it by cloth. And leave to dry it completely in a well-ventilated place under the sun in time;
3. Sponge cleaning: normally tap it lightly to clean it;
Ultra Sponge cleaning: normally tap it lightly to clean it;
4. If it was too dirty, you can wash it and leave to dry it completely in a well-ventilated place under the sun in time.




Note:

  We suggest to clean the Filter Components each 2-3 weeks for better cleaning; Please make sure to dry the Filter Components completely before use them, or the water and moisture would effect the working and lifespan of machine's electric parts.

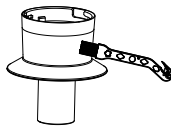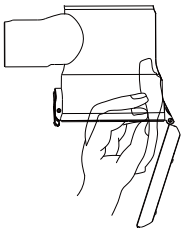



Clean the Roller brush

   Take out the Roller brush and clean the hair and other foreign matters on the Roller brush by the Hair cleaning tool and dry it by cloth; if it was too dirty, please wash it and leave to dry it in a well-ventilated place under the sun.

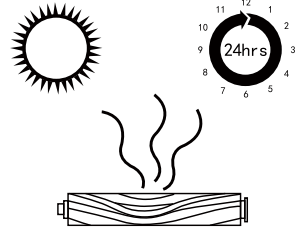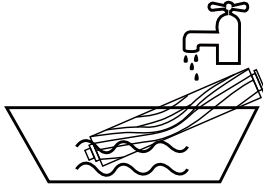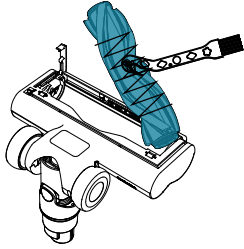

Product storage

  Fix the Wall mount to the wall with nails;
Lock the floor brush and fix the machine to the wall mount;
Attach cleaning accessories to wall mount.

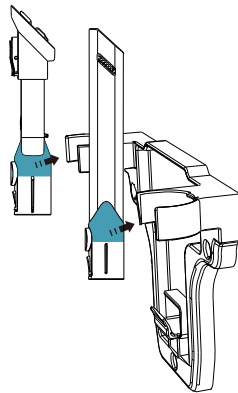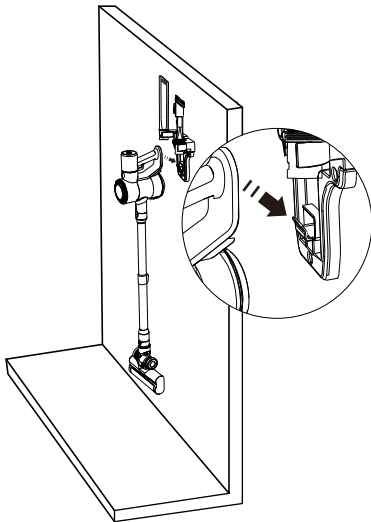

Maintenance

- Do not carry out any maintenance or repair work other than that shown and described in this Operating Manual.
- Store the machine indoors. Do not use or store it below 37.4°F (3°C). Ensure the machine is at room temperature before operating.
- Clean the machine only with a dry cloth. Do not use any lubricants, cleaning agents, polishes or air fresheners on any part of the machine.

WARNING:

When using the Lubluelu vacuum cleaner, basic precautions should always be followed. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

1. Please use the original parts for the machine, do not use other branded or no branded parts without the permission of the manufacturer. If using non-original parts causes the machine to malfunction, the warranty service will be automatically ended. The manufacturer is not responsible for any loss of life or property.
2. Please check if the product is damaged or the accessories are not completely received after unpack.
3. Do not use with damaged cord or plug. If appliance has been dropped, damaged, left outdoors, dropped into water, or is not working as it should, return it to the manufacturer.
4. Children below 15 years and incapacitated persons should use this machine under the supervision of their guardians.
5. When a fault occurs, the Power adapter should be pulled out immediately and the defective product should not be placed in working status.
6. Please do not disassemble and repair all the electric parts including but not limited motors, battery and Power adapter, which is easy to damage the machine and cause other insecurity.



Prohibited sign

Any content with the logo means being prohibited, otherwise it may cause damage to the product or endanger the personal safety of the user.

 


Warning sign

All contents with the logo means it must be handled in strict accordance with the requirements, otherwise it may cause damage to the product or endanger the personal safety of the user.



This product is for household use only. Do not use this product outdoors.

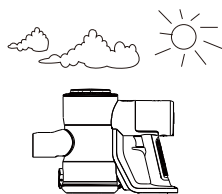

Children below 15 years are not allowed to use it alone to avoid dangers like electric shock.



Please do not let the vacuum cleaner too close to the heat source and other high temperature objects, lest plastic deformation, It will affect the use of the vacuum cleaner.



When using the vacuum cleaner, please pay attention to the installation of various filter parts, do not use the vacuum cleaner when there is no filter accessories.



Please do not use vacuum cleaner to suck cement, gypsum powder, wall powder, starch and other small particles, otherwise it will cause vacuum cleaner filter parts blockage, motor burn out and other faults, if suction of the above small particles, please timely processing filter parts.

 


Please don't use the vacuum cleaner to suck burning cigarette butts, so as to avoid danger. Please do not suck detergent, kerosene, gasoline, paint, sewage and other liquids, in case the liquid enters the motor and causes motor failure.







Please do not suck hair group, paper group and other easy to block the suction mouth and air duct objects, such as suck in the air duct, should be promptly cleaned to avoid damage to the machine.

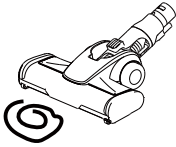

 
Please do not press heavy weights on the machine or tread on the machine.

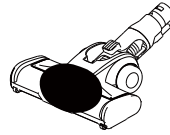

After 5-6 hours of charging time, please unplug the charger from the socket and keep it properly. Avoid children taking it away

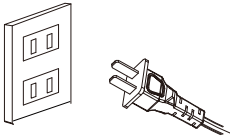 

 When cleaning the vacuum cleaner, please use the wet cloth with water or neutral detergent, do not use gasoline, banana oil, etc., or it will cause shell crack and fade

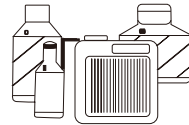

Troubleshooting

Problem	Possible cause	Solution
The vacuum cleaner doesn't work	No power	Charge the battery for 3-4h
	Battery not installed	Reinstall the battery to the correct position
	The suction mouth is blocked	Check and remove blockages

Problem	Possible cause	Solution
Weak suction power	Dustbin and Filters are full of dust	Clean the Dustbin and Filters
	Not properly assembled	Check each interface and Dustbin button to ensure normal assembly
	Speed mode is not suitable	Change the Speed mode for bigger suction power
	Battery is not fully charged	Charge the battery for 3-4 hours and then use it
	The Roller brush is wrapped by hairs or fibers	Clean the Roller brush
Working time is too short	Battery is not fully charged	Charge the battery for 3-4 hours and then use it
	Speed mode is too big	Choose suitable Speed mode for different ground condition
Battery won't charge	The adapter is not correctly inserted	Reinsert the adapter correctly
	Poor contact of the main body or battery	Check if the main body and battery are correctly placed
	The adapter is not designed for Lubluelu 008 vacuum cleaner	Use the original power adapter
	The socket is not working	Check the socket and make sure it is working or change a new socket to try again

Problem	Possible cause	Solution
The Roller brush is not working	Out of power	Charge the battery for 3-4 hours and then use it
	The Roller brush is wrapped by hairs or fibers	Clean the Roller brush
	The Roller brush is not well installed	Install the Roller brush again to the correct position

Note:

In any other cases or if the solutions explained above can not solve the problem, please contact us via support@lubluelu.com or visit our website lubluelu.com for further support.

Warranty

The 2-Year Limited Warranty

Applies to purchases made from authorized retailers of Lubluelu. According to the requirements outlined in this instruction manual, subject to the following conditions and exclusions.

WHAT IS COVERED?

Your Lubluelu machine has a 2-year warranty against original defects in material and workmanship.

when used for private household purposes in accordance with the Lubluelu Instruction Manual.

This warranty provides, at no extra cost to you, all labor and parts necessary to ensure your machine is in proper operating condition during the warranty period.

This warranty will only be valid if the machine is used in the country in which it was sold.

WHAT IS NOT COVERED?

Lubluelu shall not be liable for costs, damages or repairs incurred as a result of:

- Machines purchased from an unauthorized dealer.
- Careless operation or handling, misuse, abuse and/or lack of maintenance or use not in accordance with the Lubluelu Instruction Manual.
- Use of the machine other than for normal domestic purposes, e.g. for commercial or rental purposes.
- Use of parts not in accordance with the Lubluelu Instruction Manual.
- Use of parts and accessories other than those produced or recommended by Lubluelu.
- External factors unrelated to product quality and use, like accidental water damage.
- Repairs or alterations carried out by unauthorized parties or agents.
- Failing to clear blockage and other hazardous material from the machine.
- Normal wear and tear, including normal wearing parts, such as Dustbin, Filter, HEPA, and Power adapter (or where external damage or abuse is diagnosed), carpet or floor damage due to use not in accordance with manufacturer's instructions or failure to turn the brush bar off when necessary.
- Reduction in battery discharge time due to battery age or use.

WARRANTY SERVICE

Register: Highly recommend you to register your machine on Lubluelu official website and enjoy exclusive benefits.

Failure to register your product won't diminish your warranty rights.

How to Claim: Please keep your proof of purchase. To make a claim under our limited warranty, you need to provide your original purchase receipt with the purchase date and order number on it.

All work will be carried out by Lubluelu or its authorized agency.

Any replaced defective parts will become the property of Lubluelu.

Service under this warranty will not extend the period of this warranty.

If your machine is not functioning properly, please email us: support@lubluelu.com

Customer Service

Please contact us if you need any help as following:

- Technical Support
- Package is NOT in perfect condition
- Parts missing
- Any other quality issues

Email: support@lubluelu.com

Website: lubluelu.com



HAIWAI CONSULTING LTD
113, GloucesterPlace, Fly, London, England, W1U 6JR
Email: zao0168@hotmail.com



Made in China